


The Vacmobile MICRO may be supplied with or without the optional docking cart. In both cases, the external packaging will largely be the same. If supplied with the cart, the machine will be shipped inside the cart. If the package is opened as shown below, the packaging will be reusable.

Unpacking

Remove the outer plastic film and cut the plastic straps.



Lift the complete carton off intact. **DO NOT OPEN THE TOP FLAPS.**

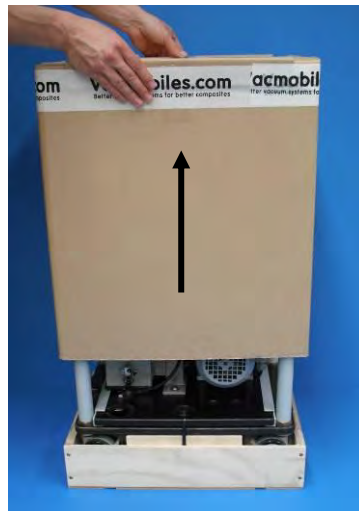

Cut the nylon ties securing either the machine to the packaging base, or the docking cart plus machine, to the package base.

Lift the machine, or the docking cart plus machine, off the packaging base.




Vacmobile MICRO 8/2

INSTRUCTIONS UNPACKING & PREPARING FOR USE

Lock the castors when removing the machine from docking station


If the machine has been supplied with the optional docking cart, lock the castors on the cart.

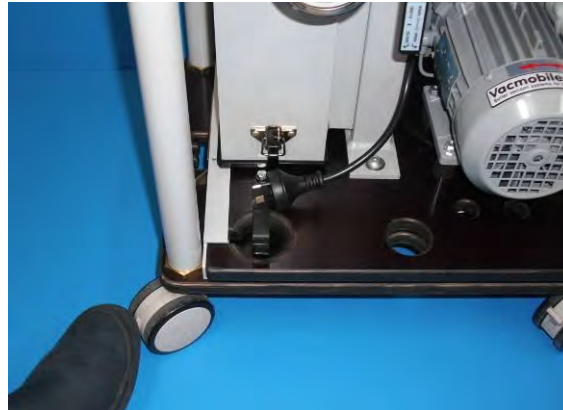


Repositioning the machine in the docking station

If the machine has been supplied with the optional docking cart, pull out the gold coloured latch spring and slide the machine from the docking cart.

Slide the machine out from the lower position and latch it into position on the top level of the cart.

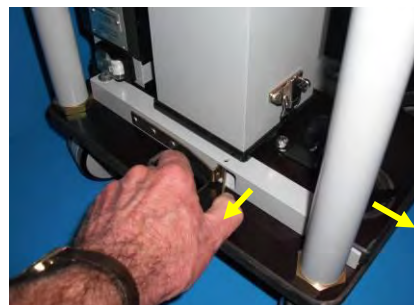

Insert pump oil
sight glass side first

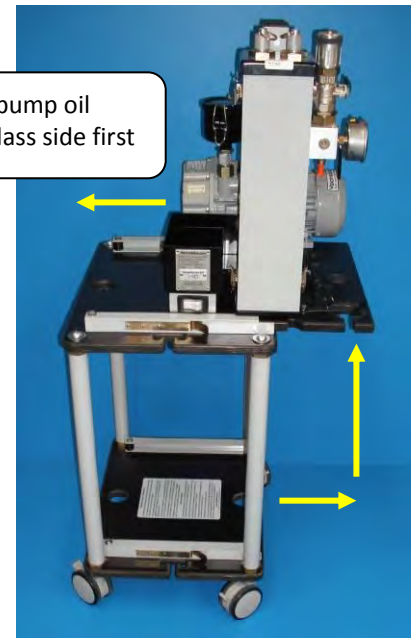

Check the power supply

Check that the power supply voltage and frequency on the machine's serial number plate is correct for your location.



Locate & read the instruction manual

Locate and read the operating and service instructions.



**Before connecting to the power –
add oil to the vacuum pump!**

ADD OIL TO THE VACUUM PUMP!

Add 225 ml of oil from the small oil bottle with the spout. To empty the bottle, repeatedly squeeze then release the bottle, to allow the bottle to vent.

DO NOT THROW THE BOTTLE WITH THE SPOUT AWAY! It will be required for future oil fills.

DO NOT OVERFILL! Fill to a maximum of $\frac{3}{4}$ level on the sight glass.

